



CONTAX AX

ASSEMBLING CHART

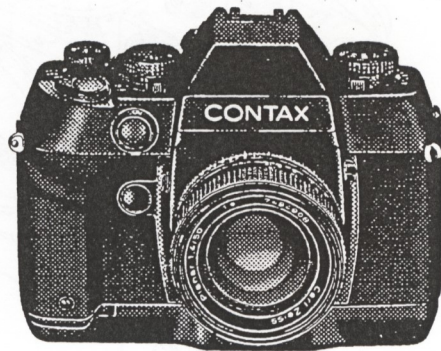


KYOCERA CORPORATION
Optical Equipment Group
Service Dept. 960705

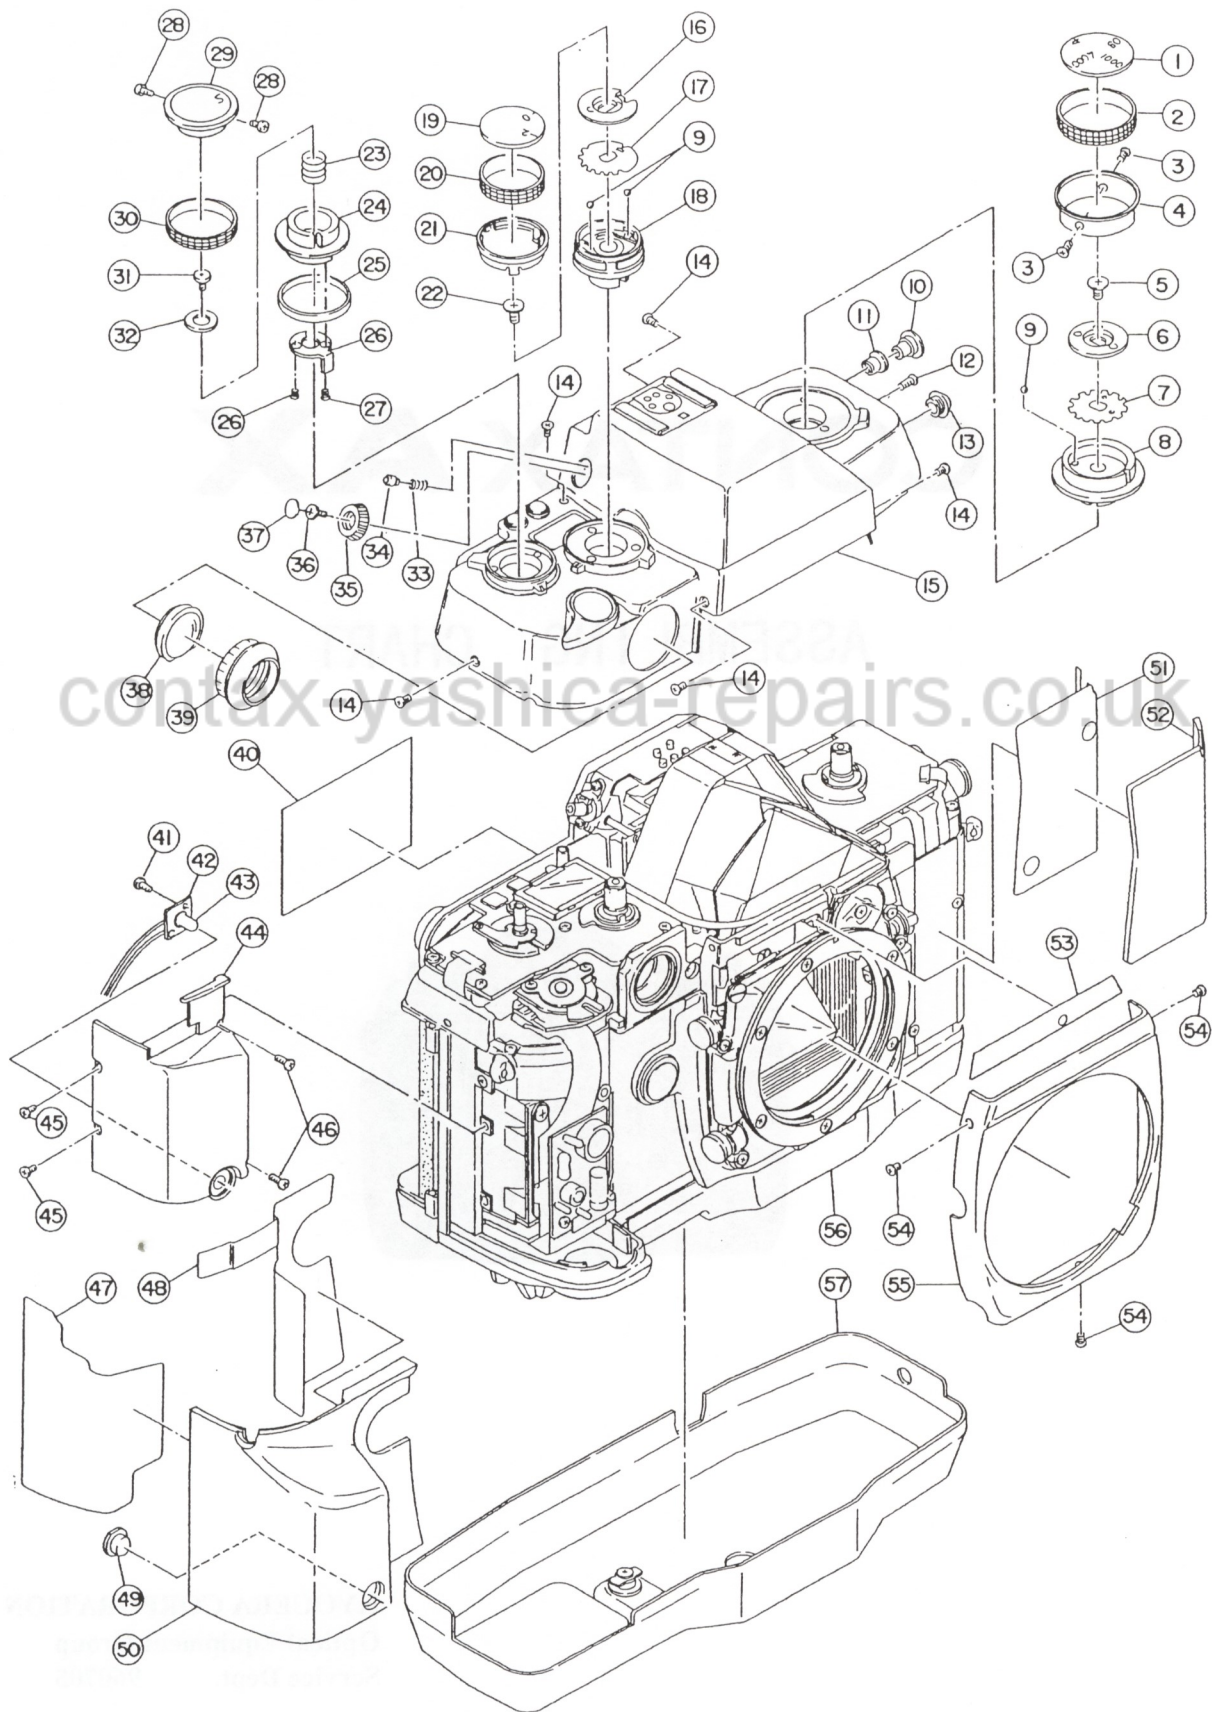


PARTS NO.	DESCRIPTION	QTY
1 1AM22400	SPEED NAME PLATE	1
2 1AA97510	SHUTTER DIAL COVER	1
3 69102576	S. DIAL S.S	2
4 1AH26200	S. DIAL	1
5 66001063	S. CLICK RETAINING PLATE S.S	1
6 1AF22300	S. CLICK RETAINING PLATE	1
7 1AM21910	S. DIAL CLICK	1
8 1AF20410	S. DIAL HOLDER	1
9 66701520	STEEL BALL (ϕ 1.5)	3
10 13916500	RELEASE CAP (S)	1
11 13916400	R. SOCKET DECORATING RING	1
12 61815029	TOP COVER ASS'Y S.S	1
13 13913800	SYNCHRO CAP	1
14 61812529	TOP COVER ASS'Y S.S	5
15 1AFD0100	TOP COVER ASS'Y (See Page No.9)	1
16 1AF22800	EXP. COMPENSATION STOP PLATE	1
17 1AH28900	EXP. COMPENSATION CLICK	1
18 1AF22900	EXP. COMPENSATION DIAL HOLDER	1
19 1AM23200	EXP. COMPENSATION NAME PLATE	1
20 14126100	ASA DIAL COVER	1
21 1AH28700	EXP. COMPENSATION NAME PLATE HOLDER	1
22 66001063	EXP. COMPENSATION STOP PLATE S.S	1
23 1AF26100	D. DIAL SPRING	1
24 1AF23700	D. DIAL HOLDER	1
25 1AF23800	D. DIAL COLLAR	1
26 *	D. DIAL OPERATION PLATE	1
27 69102566	D. DIAL OPERATION PLATE S.S	2
28 69102566	DRIVE DIAL S.S	2
29 1AF23600	DRIVE DIAL	1
30 1AF26000	D. DIAL COVER	1
31 66001004	D. DIAL SPRING RETAINER S.S	1
32 1AF25910	D. DIAL SPRING RETAINER	1
33 1AF82510	DIOPTIC CLICK SPRING	1
34 1AF82100	DIOPTIC CLICK PIN	1
35 1AF82300	DIOPTIC ADJUSTMENT KNOB	1
36 66001227	DIOPTIC ADJUSTMENT KNOB S.S	1
37 1AF83800	DIOPTIC ADJUSTMENT KNOB PLATE	1
38 1AF63400	AF-ASSIST BEAM EMITTER LENS	1
39 1AF63100	AF-ASSIST BEAM EMITTER RING	1
40 1AF91000	PRESSURE PLATE SHEET	1
41 69113576	SELF-TIMER LED BOARD S.S	1
42 1AH53000	SELF-TIMER LED BOARD	1
43 5EDLSGL3PR8**01	SELF-TIMER LED	1
44 1AF28400	FRONT PLATE (L)	1
45 61912026	FRONT PLATE (L) S.S	2
46 61913526	FRONT PLATE (L) S.S	2
47 1AF29010	L. RUBBER TAPE (3)	1
48 1AF28810	L. RUBBER TAPE (1)	1
49 1AH15200	SELF-TIMER WINDOW	1
50 1AF28610	FRONT PLATE RUBBER (L)	1
51 1AF29110	R. RUBBER TAPE	1
52 1AF28700	FRONT PLATE RUBBER (R)	1
53 1AA74920	FRONT COVER LIGHT-PROOF CURTAIN	1
54 61812529	FRONT COVER S.S	3
55 1AF29910	FRONT COVER	1
56 *	BODY	1
57 1AFD0900	BOTTOM COVER ASS'Y (See Page No.7)	1
24~27 1AFD0800	DRIVE DIAL HOLDER ASS'Y	1

The parts names with * mark are not supplied as a repair parts.

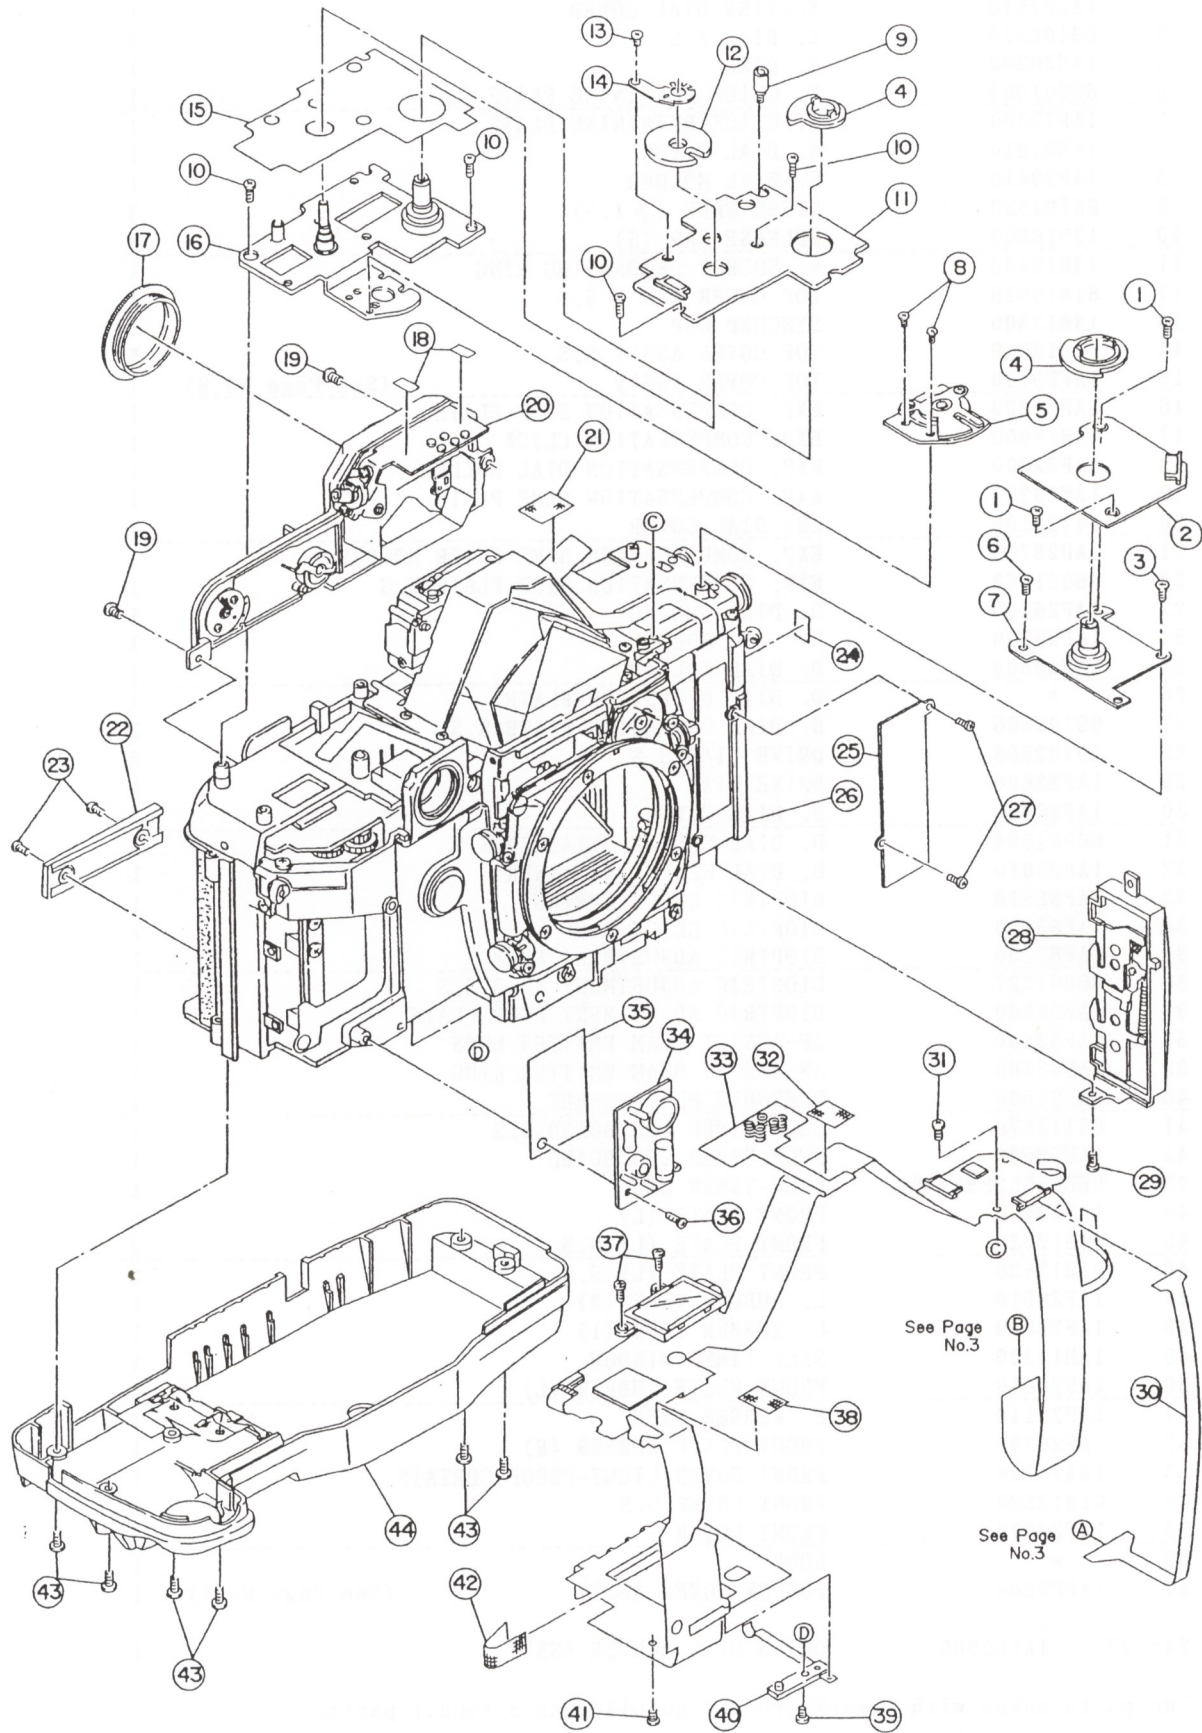

	PARTS NO.	DESCRIPTION	QTY
1	63914026	R. PC BOARD ASS'Y S.S	2
2	1AFE1500	R. PC BOARD ASS'Y	1
3	61813026	S. DIAL BASE PLATE S.S	1
4	1AFC6000	EXP. COMPENSTION CONTACT BASE ASS'Y	2
5	1AF52300	RELEASE UNIT	1
6	63913026	S. DIAL BASE PLATE S.S	1
7	1AF21910	S. DIAL BASE PLATE	1
8	61911526	RELEASE UNIT S.S	2
9	1AF25200	TOP COVER POST	1
10	63914026	RELEASE BASE PLATE ASS'Y S.S	4
11	1AFE1300	L. PC BOARD ASS'Y	1
12	1AFC6100	D. CONTACT BASE ASS'Y	1
13	61813026	D. MODE LOCK PLATE S.S	1
14	1AF24100	D. MODE LOCK PLATE	1
15	1AF29210	D. PC BOARD SHEET	1
16	*	RELEASE BASE PLATE	1
17	1AA88620	EYE-PIECE RING	1
18	3CK15200	FPC STICK TAPE (2)	2
19	61923026	EYE-PIECE COVER ASS'Y S.S	2
20	1AFC7300	EYE-PIECE COVER ASS'Y	1
21	*	ACETATE CLOTH TAPE	1
22	1AF27100	TEST TERMINAL COVER	1
23	61913529	TEST TERMINAL COVER S.S	2
24	1AF45800	BACK COVER SWITCH TAPE	1
25	1AF28500	FRONT PLATE (R)	1
26	*	BODY	1
27	61911526	FRONT PLATE (R) S.S	2
28	1AFC2300	BACK COVER LOCK PLATE ASS'Y	1
29	63914026	BACK COVER LOCK PLATE ASS'Y S.S	1
30	1AF54900	USM CONNECTION FPC	1
31	61912026	MAIN FPC ASS'Y S.S	1
32	*	ACETATE CLOTH TAPE	1
33	1AFE1000	MAIN FPC ASS'Y	1
34	*	DC/DC CONVERTER	1
35	1AM12000	DC/DC CONVERTER SHEET	1
36	61912522	DC/DC CONVERTER ASS'Y S.S	1
37	63914026	EXTERNAL LCD HOLDER S.S	2
38	*	ACETATE CLOTH TAPE	1
39	63913026	BATTERY DETECTION SWITCH S.S	1
40	1AF28100	BATTERY DETECTION SWITCH	1
41	61911526	MAIN FPC ASS'Y S.S	1
42	*	ACETATE CLOTH TAPE	1
43	61924026	CELL CASE ASS'Y S.S	6
44	1AFC7200	CELL CASE ASS'Y	1
			(See Page No.9)
5, 8, 11~16	1AFC5900	RELEASE BASE PLTE ASS'Y	1
34, 35	1AME1000	DC/DC CONVERTER ASS'Y	1

The parts names with * mark are not supplied as a repair parts.

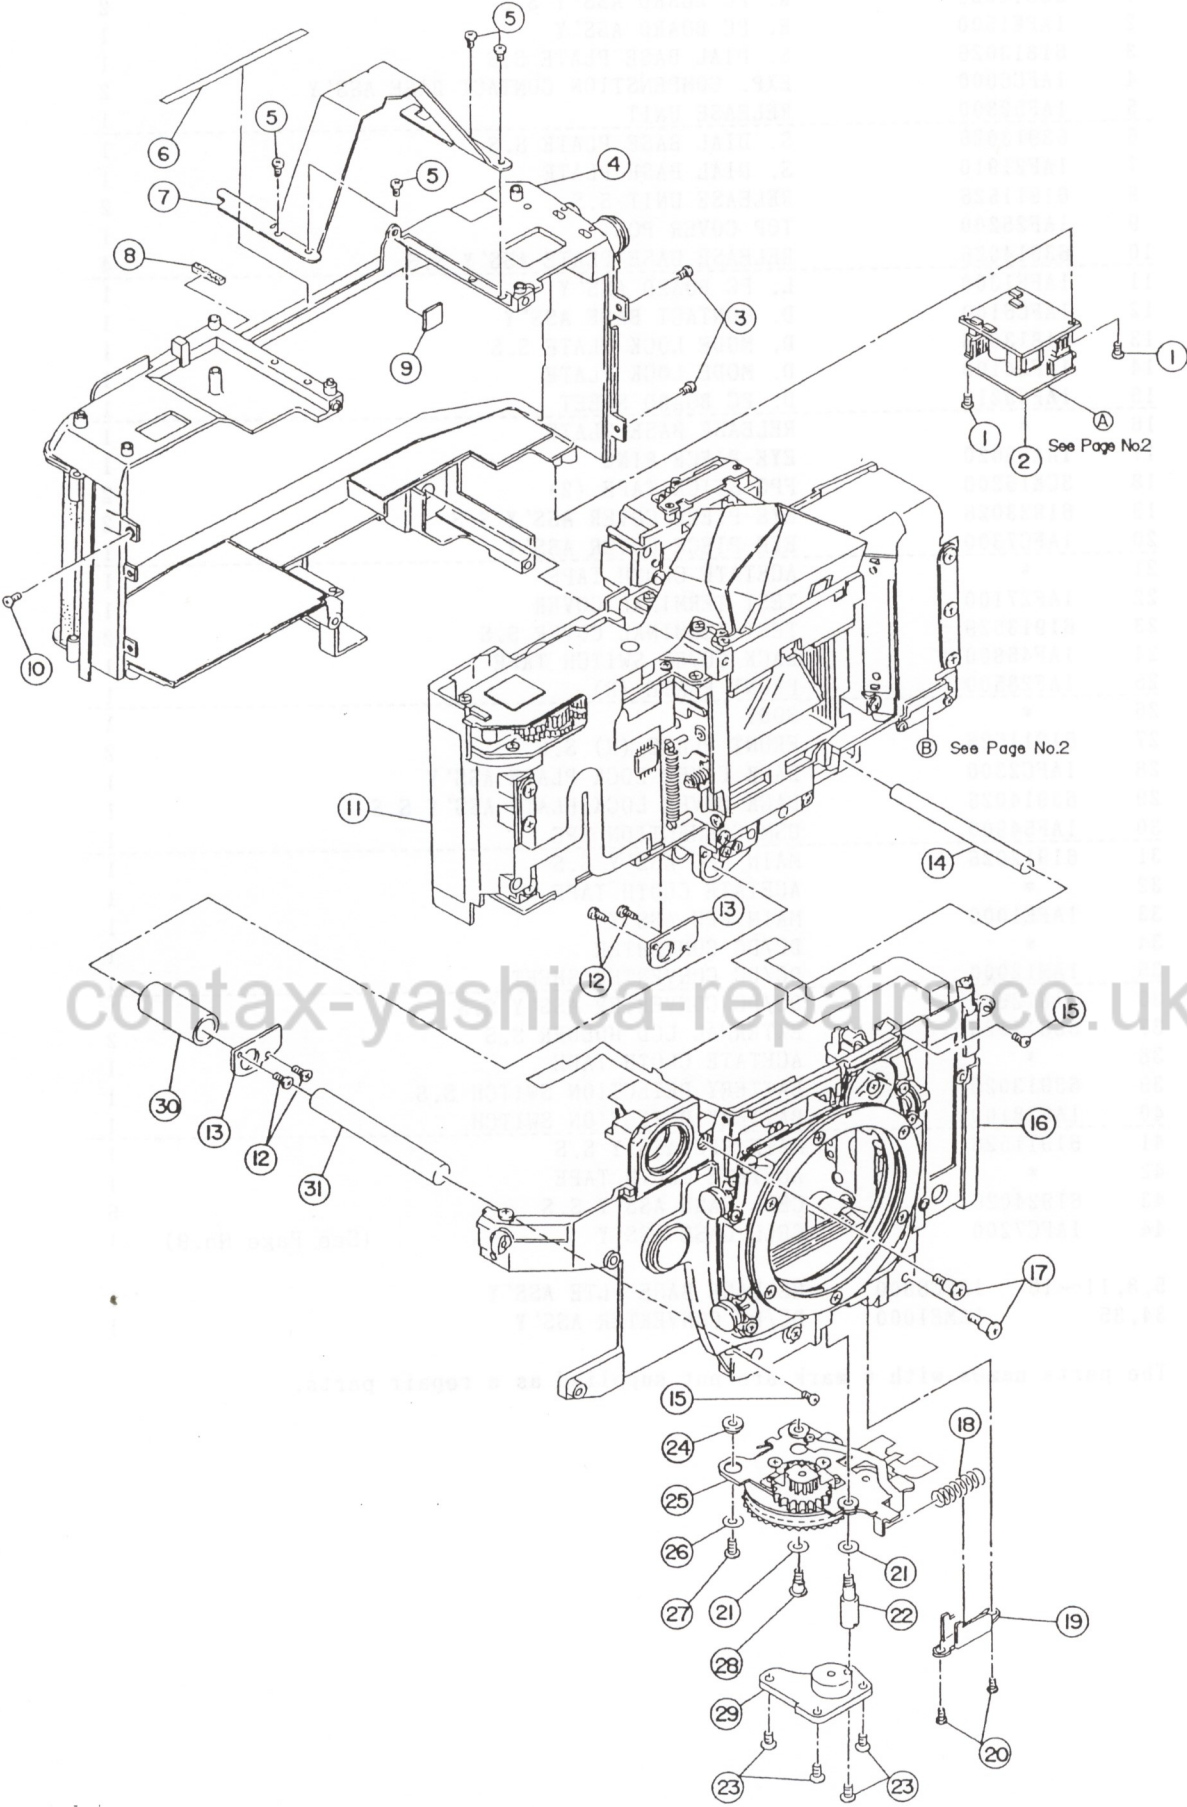


	PARTS NO.	DESCRIPTION	QTY
1	61903026	USM PC BOARD ASS'Y S.S	2
2	1AFE1400	USM PC BOARD ASS'Y	1
3	61912526	MOUNT BASE ASS'Y S.S	2
4	1AFC2000	BODY FRAME ASS'Y (See Page No.6)	1
5	61912026	PENTAPRISM ROOF (L) S.S	4
6	1AF45600	LIGHT SHIELD RUBBER TAPE (1)	1
7	1AF83530	PENTAPRISM ROOF (L)	1
8	1AF62700	MIRROR CUSHION	1
9	1AF45400	B. LIGHT SHIELD SHEET (2)	1
10	61923026	MOUNT BASE ASS'Y S.S	1
11	*	MOVABLE BODY	1
12	61914022	B. STOP PLATE S.S	4
13	1AF42200	B. STOP PLATE	2
14	1AF40600	GUIDE RAIL (2)	1
15	61924026	MOUNT BASE ASS'Y S.S	2
16	1AFC2400	MOUNT BASE ASS'Y (See Page No.8)	1
17	66001221	MOUNT BASE ASS'Y S.S	2
18	1AF43800	AF GEAR SPRING	1
19	1AF43900	AF GEAR SPRING HOLDER	1
20	61914026	AF GEAR SPRING HOLDER S.S	2
21	60132910	WASHER	2
22	1AF43600	USM BASE PLATE SCREW (1)	1
23	63824526	TRIPOD SOCKET S.S	4
24	1AF45100	USM BASE PLATE COLLAR	1
25	1AFC5200	USM ASS'Y	1
26	60122110	WASHER	1
27	61924526	USM ASS'Y S.S	1
28	66001221	USM ASS'Y S.S	1
29	1AF10500	TRIPOD SOCKET	1
30	*	GUIDE RAIL (1) COLLAR	1
31	*	GUIDE RAIL (1)	1
30,31	1AF41300	GUIDE RAIL ASS'Y	1

The parts names with * mark are not supplied as a repair parts.


Provided for free by
contax-yashica-repairs.co.uk

Not for resale

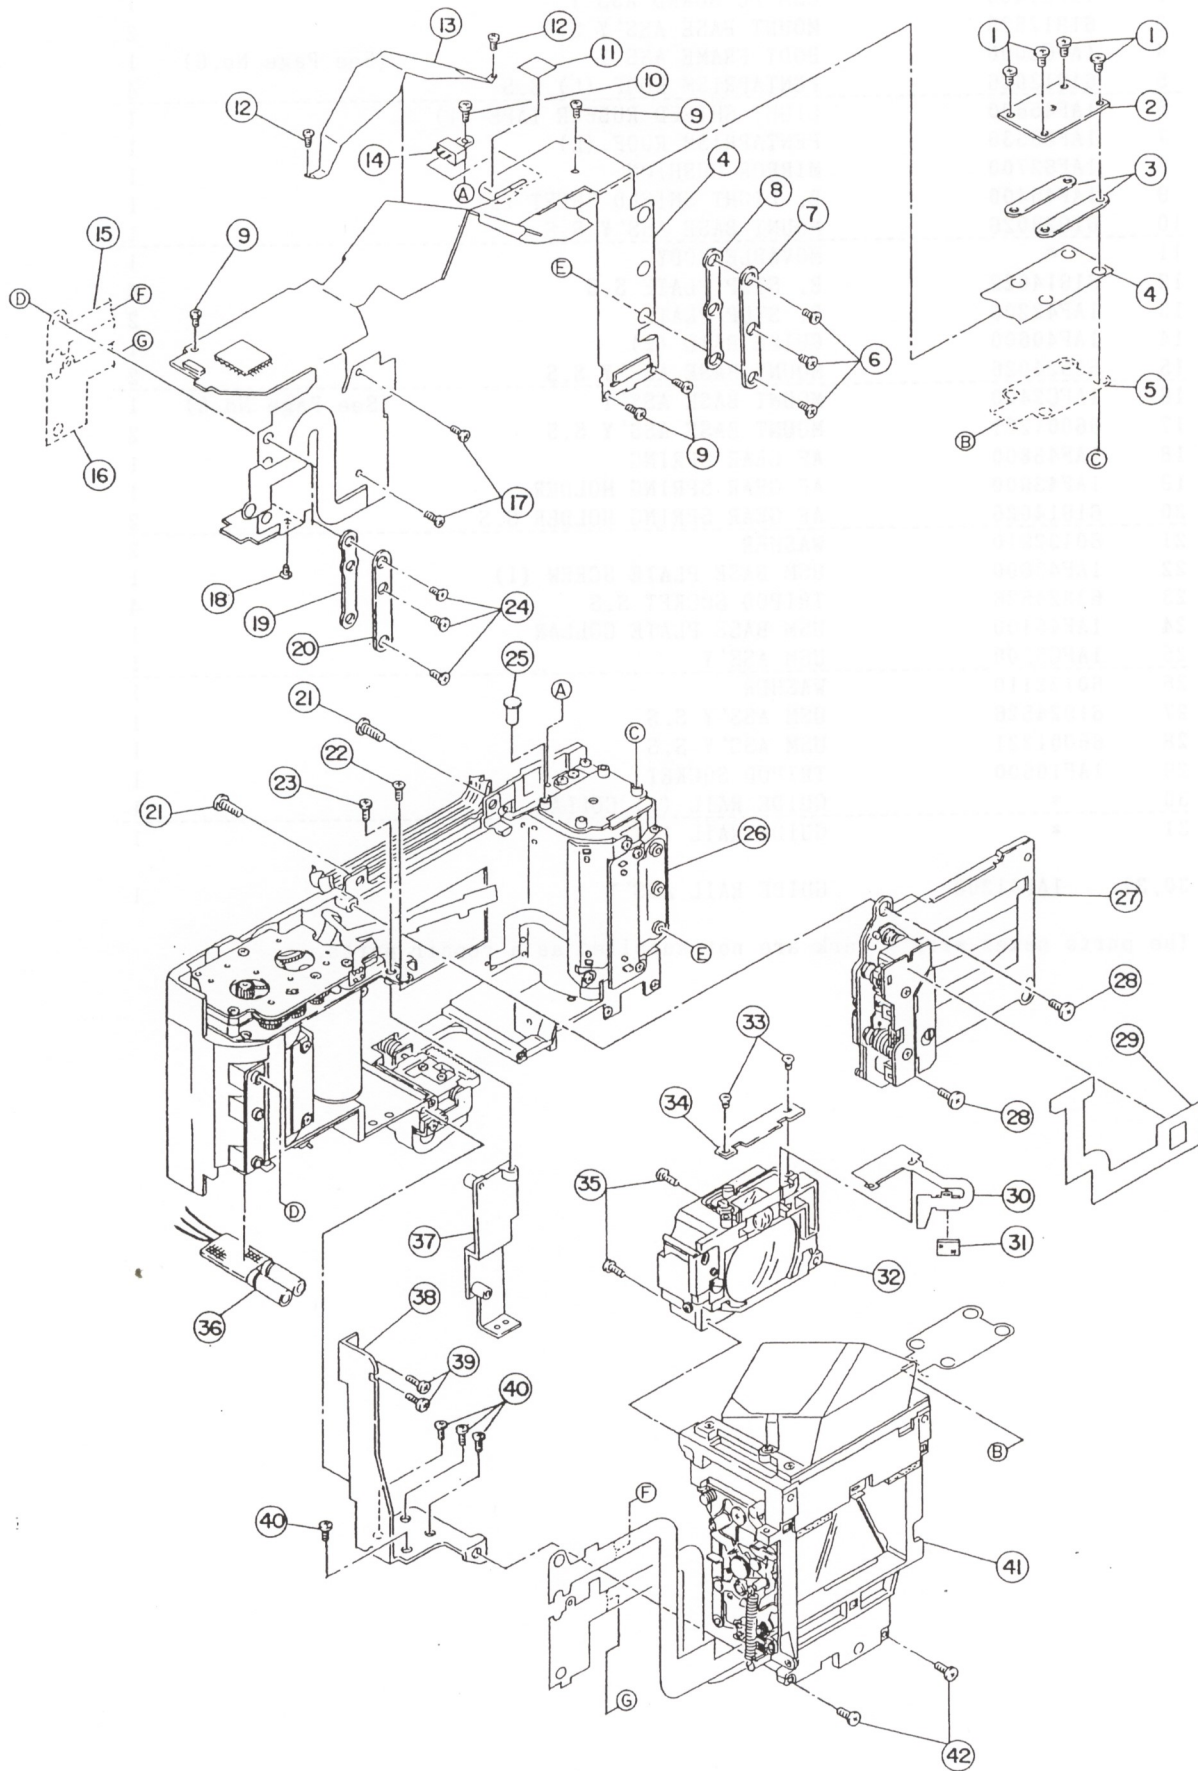



	PARTS NO.	DESCRIPTION	QTY
1	66001072	F-FPC CONNECTOR PLATE S.S	4
2	1AF79600	F-FPC CONNECTOR PLATE	1
3	1AF79700	F-FPC CONNECTOR RUBBER	2
4	*	SUB FPC	1
5	*	FINDER LCD FPC	1
6	66001072	FPC CONNECTOR PLATE (R) S.S	3
7	1AF13300	FPC CONNECTOR PLATE (R)	1
8	1AF13610	FPC CONNECTOR RUBBER (R)	1
9	61911826	SUB FPC ASS'Y S.S	4
10	63913026	BASE LOCK SWITCH S.S	1
11	1AF62900	LIGHT SHIELD SHEET	1
12	63912026	PENTAPRISM ROOF (S) S.S	2
13	1AF83420	PENTAPRISM ROOF (S)	1
14	1AF52000	BASE LOCK SWITCH	1
15	*	TTL FLASH AUTO CONTROL FPC	1
16	*	AF FPC	1
17	69213076	SUB FPC ASS'Y S.S	2
18	63913026	SUB FPC ASS'Y S.S	1
19	1AF13510	FPC CONNECTOR RUBBER (L)	1
20	1AF13200	FPC CONNECTOR PLATE (L)	1
21	69226076	MIRROR BOX ASS'Y S.S	2
22	69324076	MIRROR BOX ASS'Y S.S	1
23	69214576	BUZZER BASE PLATE S.S	1
24	66001072	FPC CONNECTOR PLATE (L) S.S	3
25	1AF12410	CARTRIDGE SWITCH PIN	1
26	*	MOVABLE BODY	1
27	1AF30500	SHUTTER UNIT	1
28	66001224	SHUTTER UNIT S.S	2
29	1AF55200	SHUTTER FPC	1
30	1AFE0500	LIGHT METERING FPC ASS'Y	1
31	*	ACETATE CLOTH TAPE	1
32	*	EYE-PIECE LENS	1
33	69313076	LIGHT METERING BASE RETAINER S.S	2
34	1AF83110	LIGHT METERING BASE RETAINER	1
35	69216076	EYE-PIECE LENS ASS'Y S.S	2
36	1AFE2000	STATIC ELECTRICITY PREVENTION BOARD ASS'Y	1
37	1AF10330	BUZZER BASE PLTAE	1
38	1AF11600	BODY REINFORCEMENT PLATE	1
39	63913026	BODY REINFORCEMENT PLATE S.S	2
40	63911826	BODY REINFORCEMENT PLATE S.S	4
41	*	MIRROR BOX (See Page No.7)	1
42	63925026	MIRROR BOX ASS'Y S.S	2
4, 14	1AFE0600	SUB FPC ASS'Y	1
30~34	1AFF0300	EYE-PIECE LENS ASS'Y	1

The parts names with * mark are not supplied as a repair parts.

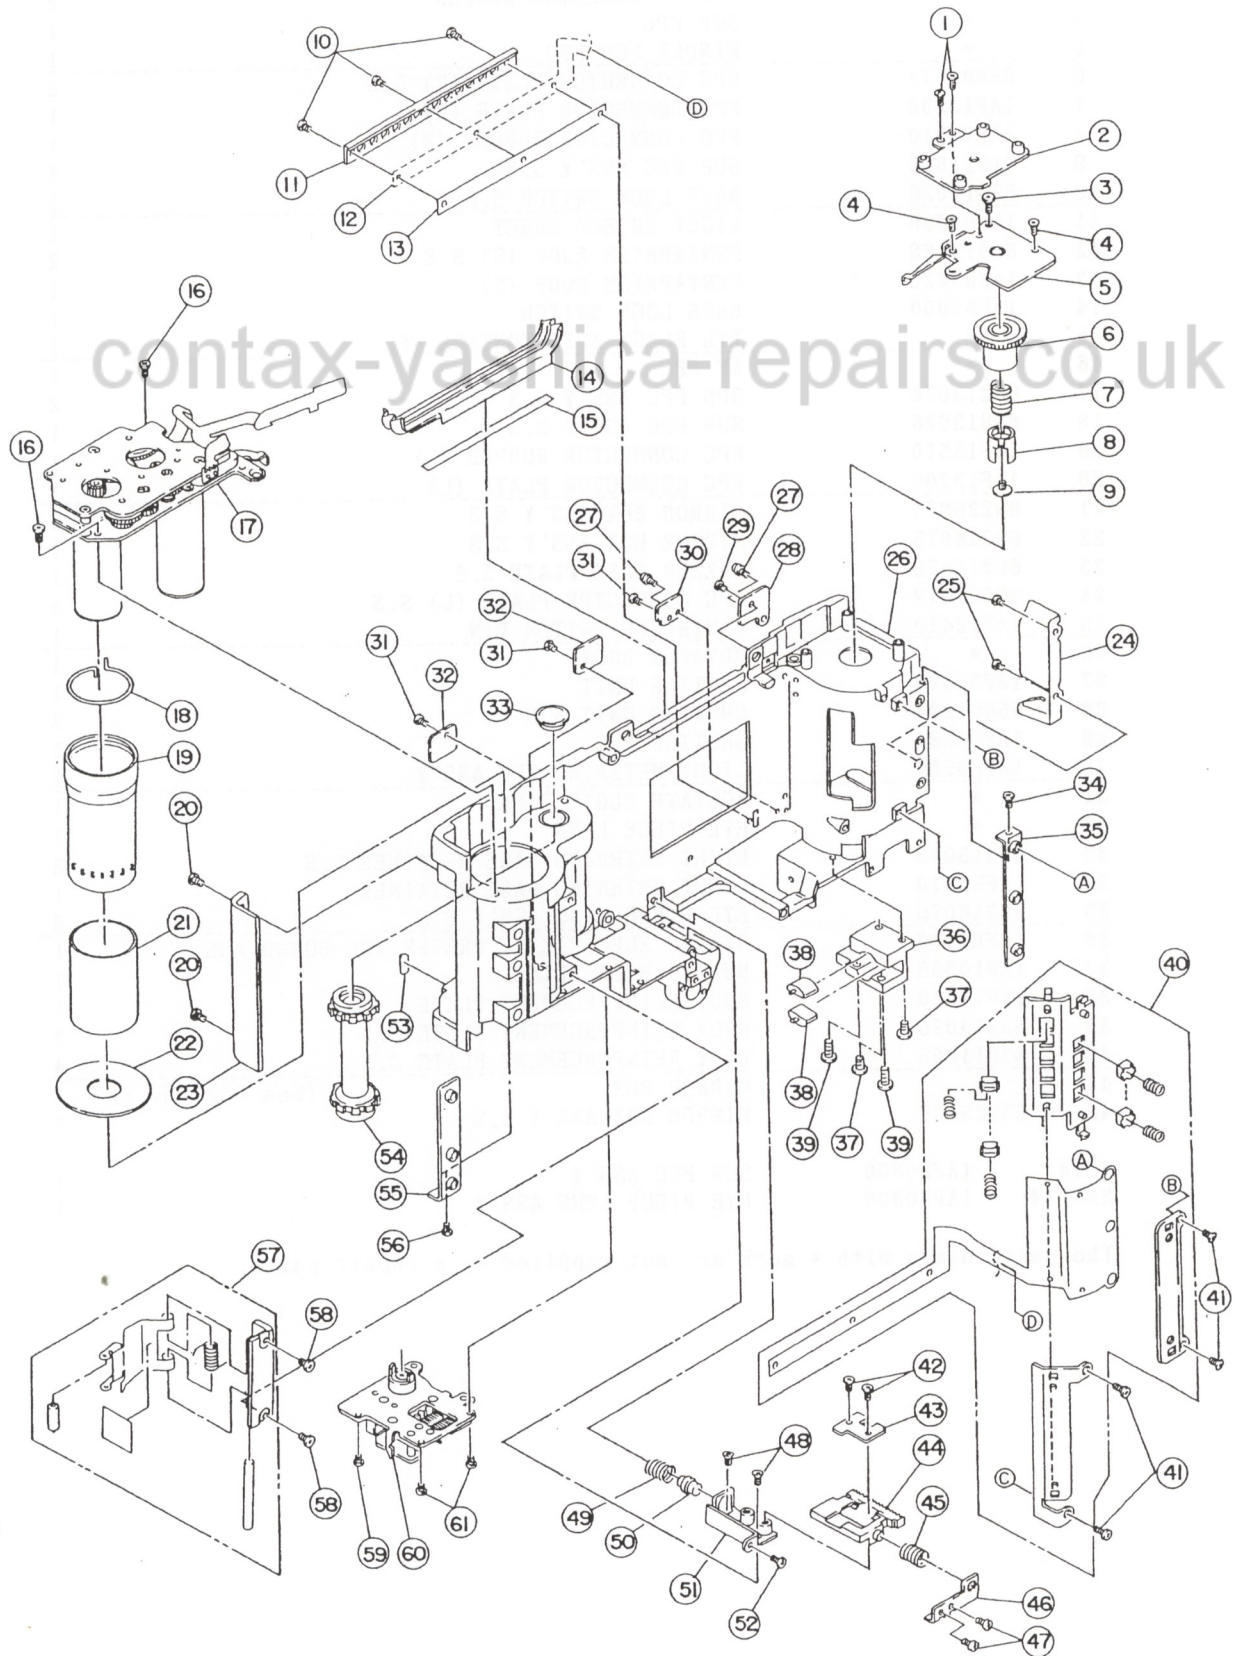


	PARTS NO.	DESCRIPTION	QTY
1	63911626	F-FPC CONNECT BASE PLATE ASS'Y S.S	2
2	1AFC1500	F-FPC CONNECT BASE PLATE ASS'Y	1
3	63913026	RW BASE PLATE (L) ASS'Y S.S	1
4	61813026	RW BASE PLATE (L) ASS'Y S.S	2
5	*	RW BASE PLATE (L)	1
6	1AF78800	RW FORK GEAR	1
7	1AF79010	RW FORK SPRING	1
8	1AF78910	RW FORK	1
9	66001233	RW FORK S.S	1
10	66001232	CONTACT COVER S.S	3
11	1AF10810	CONTACT COVER	1
12	*	DX FPC	1
13	1AF47800	COTACT FPC SPACER	1
14	1AF10910	BODY LIGHT SHIELD RUBBER	1
15	*	DUBLE-STICK TAPE	1
16	61922526	S. CHARGE BASE PLATE ASS'Y S.S	2
17	1AFB0700	S. CHARGE BASE PLATE ASS'Y (See Page No.6)	1
18	1AF32710	SPOOL SPRING	1
19	1AF32630	SPOOL	1
20	66001167	SPOOL COVER S.S	2
21	1AF32810	SPOOL RUBBER	1
22	1AF32910	SPOOL WASHER	1
23	1AF10400	SPOOL COVER	1
24	1AF11000	CARTRIDGE LIFTER	1
25	61912022	CARTRIDGE LIFTER S.S	2
26	*	MOVABLE BODY	1
27	1AF12900	BASE GUIDE SCREW	2
28	1AF12600	BASE LOCK HOLDING PLATE (1)	1
29	61812029	BASE LOCK HOLDING PLATE S.S	1
30	1AF12710	BASE LOCK HOLDING PLATE (2)	1
31	61813029	BASE LOCK HOLDING PLATE S.S	3
32	1AF12800	BASE LOCK HOLDING PLATE (3)	2
33	1AF37610	SPROCKT HOLDER	1
34	61913026	CONNECTOR BASE (R) ASS'Y S.S	1
35	1AFB0300	CONNECTOR BASE (R) ASS'Y	1
36	1AF42400	GUIDE RAIL (2) HOLDER	1
37	61924026	GUIDE RAIL (2) HOLDER S.S	2
38	1AF42300	GUIDE RAIL (2) HOLDING BASE	2
39	61925026	GUIDE RAIL (2) HOLDER S.S	2
40	1AFB0400	DX ASS'Y	1
41	61913026	DX ASS'Y S.S	4
42	61913026	RACK GUIDE PLATE S.S	2
43	1AF42100	RACK GUIDE PLATE	1
44	1AF41500	AF DRIVE RACK	1
45	1AF41700	RACK SPRING (F)	1
46	1AF42500	RACK SPRING HOLDING PLATE	1
47	61924026	RACK SPRING HOLDING PLATE S.S	2
48	61813526	RACK BASE PLATE ASS'Y S.S	2
49	1AF41800	RACK SPRING (R)	1
50	1AF41900	RACK SPRING SHAFT	1
51	1AFB2400	RACK BASE PLATE ASS'Y	1
52	61913526	RACK BASE PLATE ASS'Y S.S	1
53	1AF10710	FILM POSITION MARK SEAL	1
54	1AF36910	SPROCKET	1
55	1AFB0200	CONNECTOR BASE (L) ASS'Y	1
56	61913026	CONNECTOR BASE (L) ASS'Y S.S	1
57	1AFB0100	FILM HOLDING PLATE ASS'Y	1
58	63913026	FILM HOLDING PLATE ASS'Y S.S	2
59	61912526	ONE REVOLUTION LIMIT ASS'Y S.S	1
60	1AFB1500	ONE REVOLUTION LIMIT ASS'Y	1
61	61912522	ONE REVOLUTION LIMIT ASS'Y S.S	2
5~9	1AFC1300	RW BASE PLATE (L) ASS'Y	1

The parts names with * mark are not supplied as a repair parts.

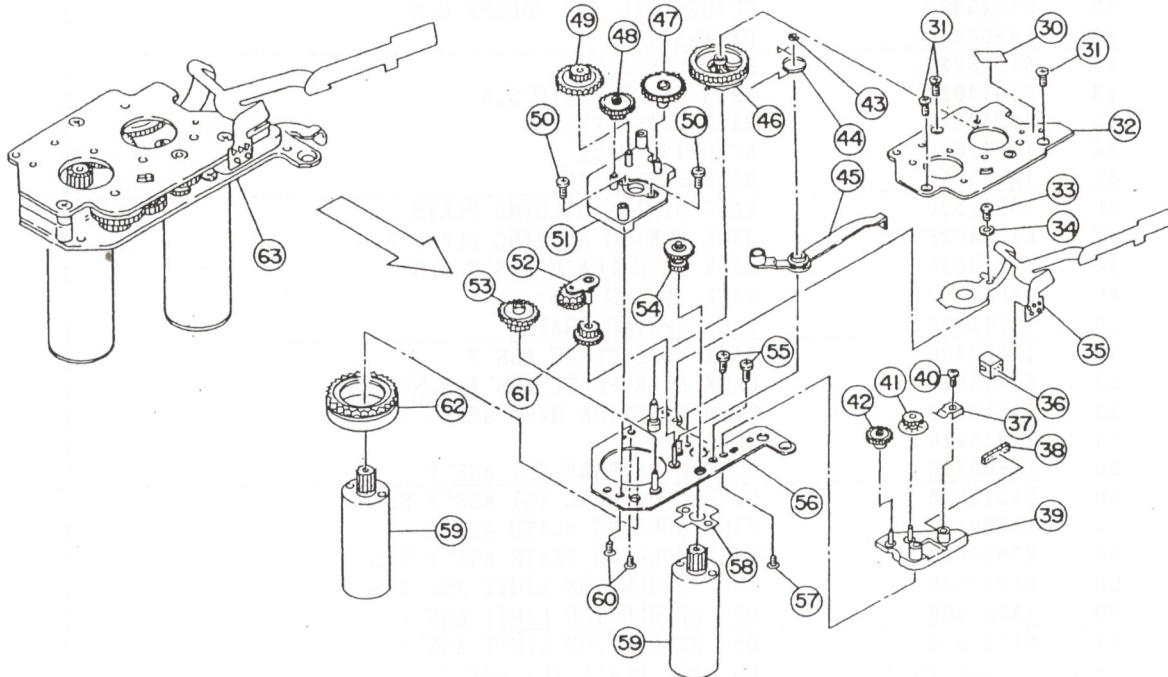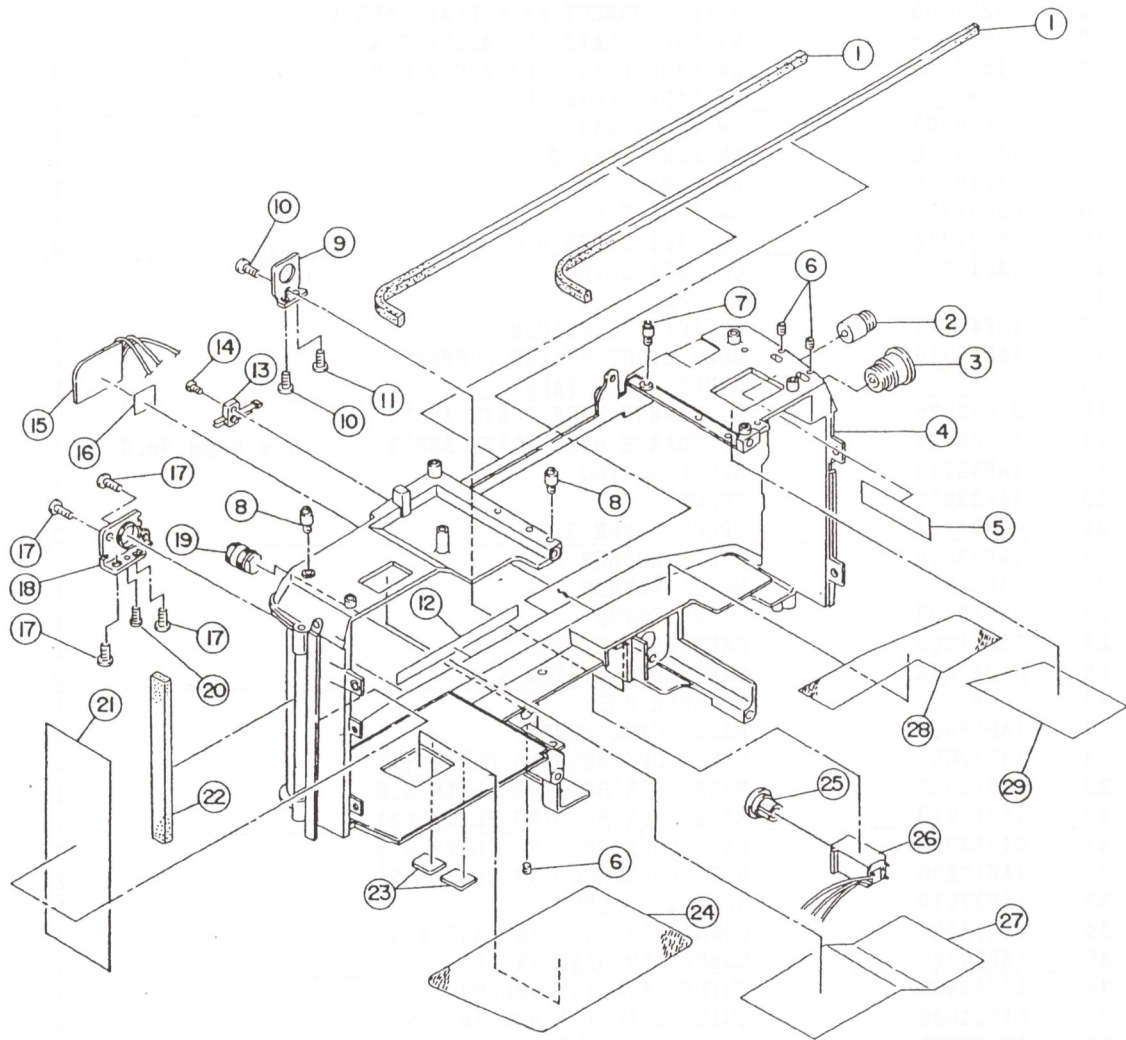


	PARTS NO.	DESCRIPTION	QTY
1	1AF47010	BODY MOQUETTE	2
2	1AFC2200	RELEASE SOCKET ASS'Y	1
3	1AFC2100	SYNCHRO SOCKET ASS'Y	1
4	*	BODY FRAME (See Page No.3)	1
5	1AF46600	BODY LIGHT SHIELD SHEET (6)	1
6	66001136	HEXAGON SOCKET SCREW	3
7	1AF25110	S. BASE PLATE POST	1
8	1AF25400	R. BASE PLATE POST	2
9	1AFC5100	GUIDE RAIL (2) ADJUST PLATE ASS'Y	1
10	63924526	GUIDE RAIL (2) ADJUST PLATE ASS'Y S.S	2
11	61923526	GUIDE RAIL (2) ADJUST PLATE ASS'Y S.S	1
12	*	DOUBLE-STICK TAPE	1
13	1AA57120	MU SWITCH	1
14	63914026	MU SWITCH S.S	1
15	1AF52410	AF-L UNIT	1
16	*	DOUBLE-STICK TAPE	1
17	63924526	GUIDE RAIL (1) ADJUST PLATE ASS'Y S.S	4
18	1AFC5000	GUIDE RAIL (1) ADJUST PLATE ASS'Y	1
19	1AFE0800	TERMINATING SWITCH BASE ASS'Y	1
20	61923526	GUIDE RAIL (1) ADJUST PLATE ASS'Y S.S	1
21	1AF46500	BODY LIGHT SHIELD SHEET (5)	1
22	1AF46800	BODY LIGHT SHIELD MOQUETTE	1
23	1AF28010	CONTACT SHEET	2
24	1AF46300	BODY LIGHT SHIELD SHEET (3)	1
25	1AM18510	EXTERNAL POWER CAP	1
26	1AM18400	EXTERNAL POWER JACK	1
27	1AF46100	BODY LIGHT SHIELD SHEET (1)	1
28	1AF46400	BODY LIGHT SHIELD SHEET (4)	1
29	1AF46200	BODY LIGHT SHIELD SHEET (2)	1
30	*	DOUBLE-STICK TAPE	1
31	69313576	S. CHARGE UPPER BASE PLATE S.S	3
32	*	S. CHARGE UPPER BASE PLATE	1
33	66001150	SPOOL FPC S.S	1
34	60152710	WASHER	1
35	1AF55400	SPOOL FPC	1
36	5ENCRP11133**01	PHOTO-INTERRUPTER	1
37	1AF33300	SPOOL PI RETAINING PLATE	1
38	1AF33500	SPOOL BASE PLATE MOQUETTE	1
39	1AF30400	SPOOL PULSE BASE PLATE	1
40	61913026	SPOOL PI RETAINING PLATE S.S	1
41	1AF33200	WINDING ENCODER GEAR (2)	1
42	1AF33100	WINDING ENCODER GEAR (1)	1
43	66101225	E RING (E-12)	1
44	1AF35200	MS CHARGE LEVER SPRING	1
45	1AFB1000	MS CHARGE LEVER ASS'Y	1
46	1AFB1100	MS CHARGE CAM ASS'Y	1
47	1AF34000	MS CHARGE GEAR (3)	1
48	1AF33800	MS CHARGE GEAR (1)	1
49	1AF33900	MS CHARGE GEAR (2)	1
50	63913526	WINDING MOTOR S.S	2
51	1AF30200	S. CHARGE MIDDLE BASE PLATE	1
52	1AFB1200	WINDING EPICYCLIC ARM ASS'Y	1
53	1AF31500	WINDING GEAR (5)	1
54	1AFB1300	WINDING GEAR (2) ASS'Y	1
55	61912226	WINDING MOTOR S.S	2
56	*	S. CHARGE LOWER BASE PLATE	1
57	69313576	SPOOL PULSE BASE PLATE S.S	1
58	1AF33000	MOTOR SPACER	1
59	1AF30600	WINDING MOTOR	2
60	69313576	S. CHARGE MIDDLE BASE PLATE S.S	2
61	1AF31300	WINDING GEAR (3)	1
62	1AF31600	WINDING GEAR (6)	1
63	1AFB0700	S. CHARGE BASE PLATE ASS'Y	1

The parts names with * mark are not supplied as a repair parts.

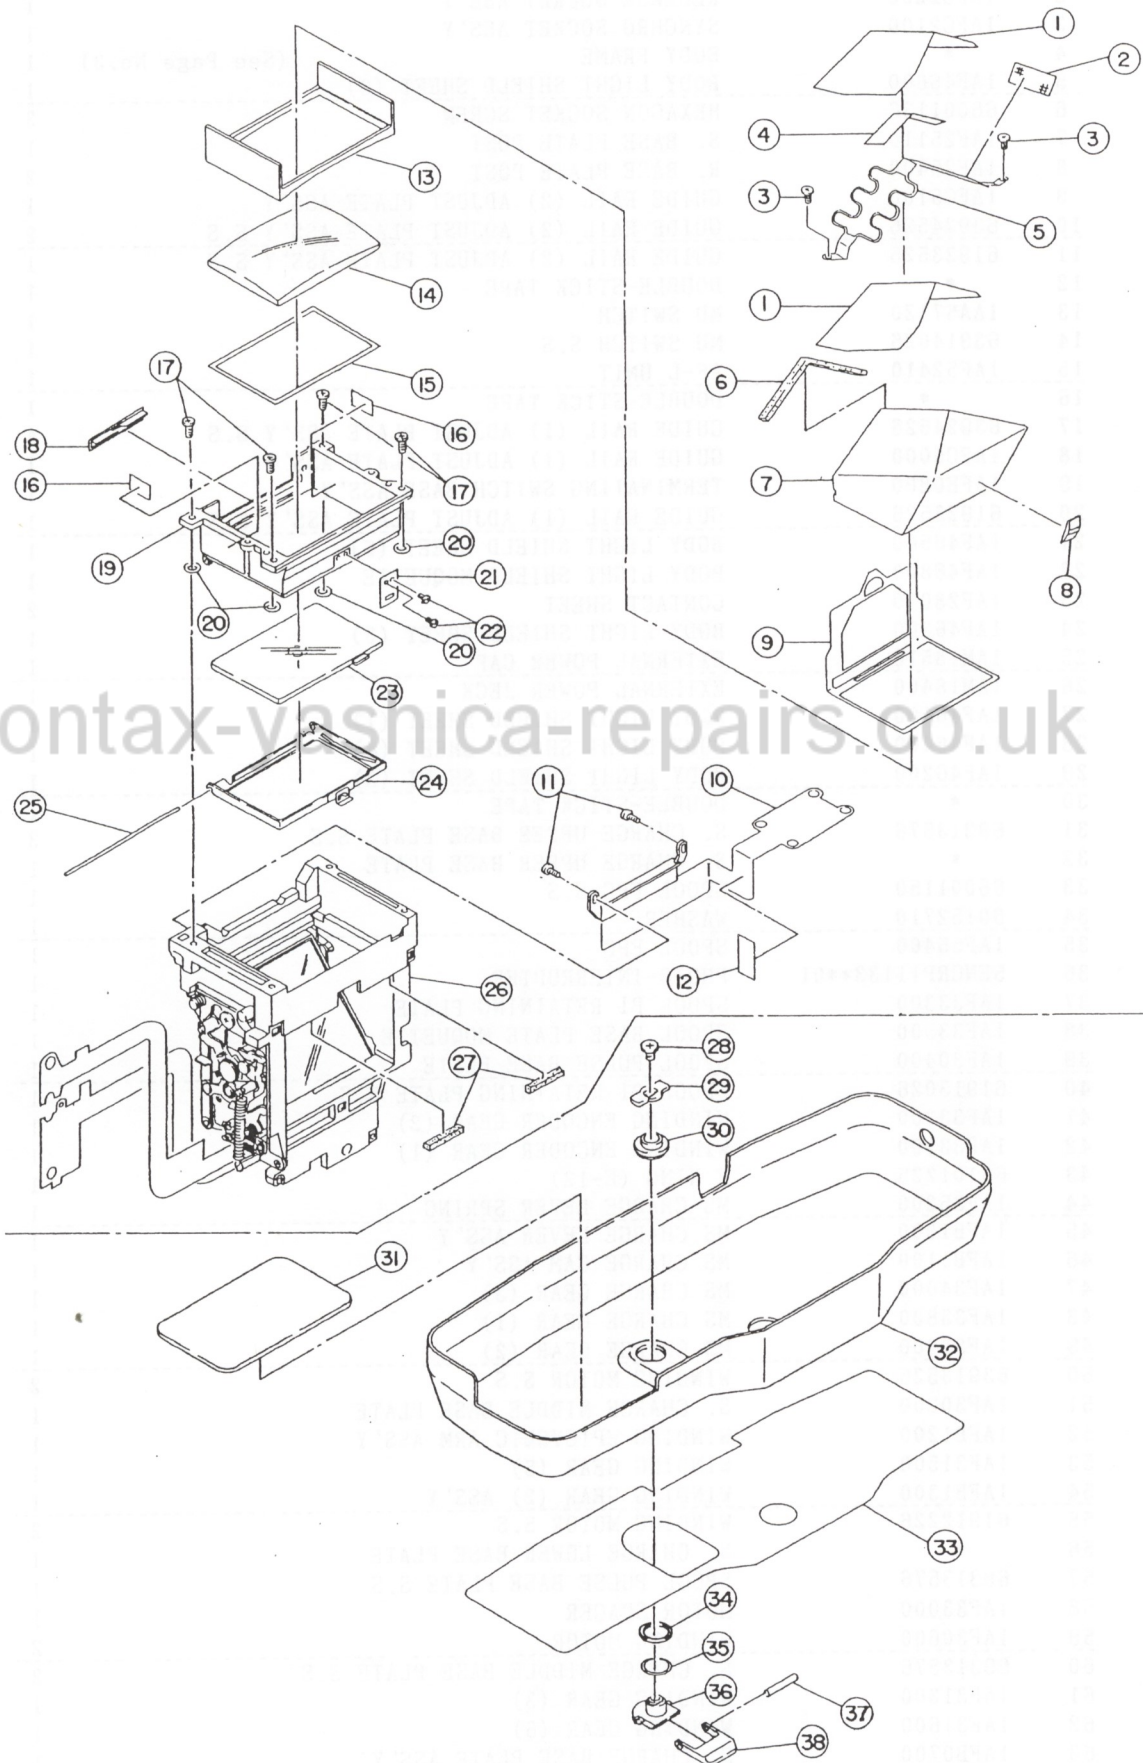



	PARTS NO.	DESCRIPTION	QTY
1	17484210	PENTA. COVER	2
2	*	ACETATE CLOTH TAPE	1
3	63912526	PENTA PRISM RETAINING SPRING S.S	2
4	*	DOUBLE-STICK TAPE	1
5	1AF80510	PENTA PRISM RETAINING SPRING	1
6	1AA82110	PENTA PRISM DUST-PROOF MOQUETTE	1
7	1AF80100	PENTA PRISM	1
8	1AA82200	PENTA PRISM RETAINING PLATE	1
9	1AF80810	VIEWFINDER FRAME (B)	1
10	1AFF0200	FINDER LCD ASS'Y	1
11	66001046	FINDER LCD ASS'Y S.S	2
12	*	DOUBLE-STICK TAPE	1
13	1AF80320	PENTA PRISM SPACER	1
14	1AF80600	CONDENSER LENS	1
15	1AF80700	VIEWFINDER FRAME (A)	1
16	1AD79000	AF-M RUBBER	2
17	69215576	PENTA PRISM HOLDER S.S	4
18	1AF81100	FINDER INDICATION PRISM	1
19	1AF80210	PENTA PRISM HOLDER	1
20	12866700	FOCUS ADJUST WASHER (t:0.02)	4
	12866600	FOCUS ADJUST WASHER (t:0.05)	4
	60311812	FOCUS ADJUST WASHER (t:0.1)	4
	60321810	FOCUS ADJUST WASHER (t:0.2)	4
	60331817	FOCUS ADJUST WASHER (t:0.3)	4
	60341812	FOCUS ADJUST WASHER (t:0.4)	4
	60351810	FOCUS ADJUST WASHER (t:0.5)	4
	60361817	FOCUS ADJUST WASHER (t:0.6)	4
21	1AM82700	FS LOCK SPRING (S)	1
22	61902026	FS LOCK SPRING (S) S.S	2
23	1AH84900	FOCUSING SCREEN	1
24	1AMF0200	FS HOLDER ASS'Y	1
25	1AM83000	FS HINGE SHAFT	1
26	*	MIRROR BOX	1
27	1AF62700	MIRROR CUSHION	2
26, 27	1AFC0100	MIRROR BOX ASS'Y	1
28	66001031	BOTTOM COVER LOCK S.S	1
29	1AF27500	BOTTOM COVER LOCK	1
30	1AF27410	BOTTOM COVER LOCK SHAFT HOLDER	1
31	1AM29000	BOTTOM COVER SHEET	1
32	*	BOTTOM COVER (See Page No.1)	1
33	1AF29310	BOTTOM COVER PROTECTOR	1
34	1AF21500	FRICTION WASHER	1
35	1AF21400	FRICTION FLAT SPRING	1
36	1AF27300	BOTTOM COVER LOCK SHAFT	1
37	66661730	SPRING PIN	1
38	1AF27200	BOTTOM COVER LOCK KNOB	1

The parts names with * mark are not supplied as a repair parts.

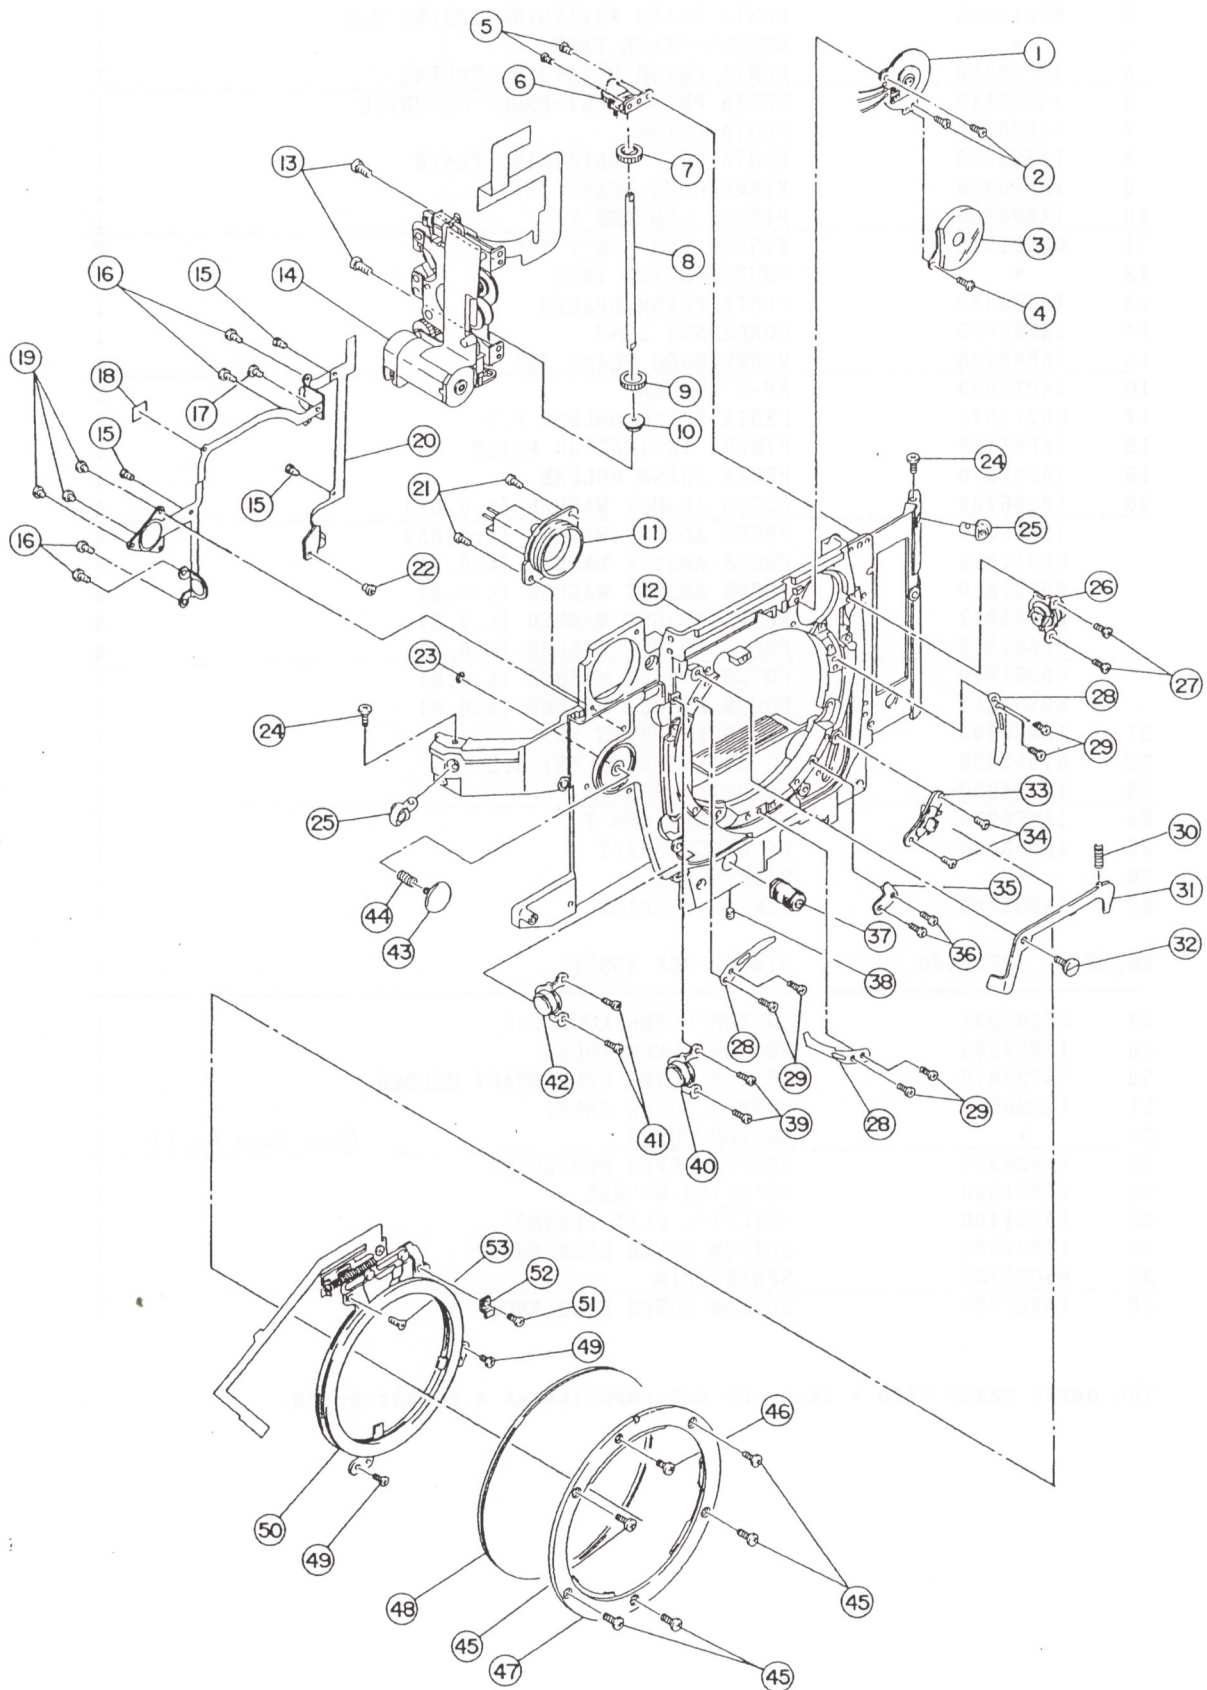


	PARTS NO.	DESCRIPTION	QTY
1	1AAAB360	APERTURE CODE ASS'Y	1
2	61913026	APERTURE CODE ASS'Y S.S	2
3	1AA78700	APERTURE INTERLOCK COVER	1
4	61902022	APERTURE INTERLOCK COVER S.S	1
5	61912526	RW BASE PLATE (S) ASS'Y S.S	2
6	1AFC4800	RW BASE PLATE (S) ASS'Y	1
7	1AF77900	RW GEAR (3)	1
8	1AF78200	RW COUPLING SHAFT	1
9	1AF77800	RW GEAR (2)	1
10	1AF78410	RW COUPLING SHAFT HOLDER	1
11	1AFE0700	AF-ASSIST BEAM EMITTER ASS'Y	1
12	*	MOUNT BASE (See Page No.3)	1
13	61923022	F. BASE PLATE ASS'Y S.S	2
14	1AFC3300	F. BASE PLATE ASS'Y	1
15	61902026	MOUNT BASE FPC ASS'Y S.S	3
16	61913026	MOUNT BASE FPC ASS'Y S.S	4
17	66001050	MOUNT BASE FPC ASS'Y S.S	1
18	*	POLYIMIDE TAPE	1
19	61911526	MOUNT BASE FPC ASS'Y S.S	3
20	1AFC2600	MOUNT BASE FPC ASS'Y	1
21	61913026	AF-ASSIST BEAM EMITTER ASS'Y S.S	2
22	61912522	MOUNT BASE FPC ASS'Y S.S	1
23	66101225	E RING (E-12)	1
24	63926026	STRAP HOLDER S.S	2
25	1AQ16310	STRAP HOLDER	2
26	1AFC3200	METERING CHANGE LEVER ASS'Y	1
27	61913026	METERING CHANGE LEVER ASS'Y S.S	2
28	13981230	MOUNT SPRING	3
29	61913026	MOUNT SPRING S.S	6
30	1AA78510	LENS LOCK LEVER SPRING	1
31	1AF79900	LENS LOCK LEVER	1
32	1AA78600	LENS LOCK LEVER S.S	1
33	61813026	THETA BASE PLATE ASS'Y S.S	2
34	1AFC3100	THETA BASE PLATE ASS'Y	1
35	13981300	MOUNT STOPPER	1
36	61913026	MOUNT STOPPER S.S	2
37	1AFE0800	TERMINATING SWITCH BASE ASS'Y	1
38	66001136	HEXAGON SOCKET SCREW S.S	1
39	61913026	LENS LOCK BUTTON ASS'Y S.S	2
40	1AFC2500	LENS LOCK BUTTON ASS'Y	1
41	61913026	PREVIEW BUTTON ASS'Y S.S	2
42	1AFC2700	PREVIEW BUTTON ASS'Y	1
43	1AF70920	EXPOSURE CHECK BUTTON	1
44	13931300	RELEASE SPRING	1
45	61925522	BODY MOUNT S.S	5
46	66001138	BODY MOUNT S.S	1
47	1AA75000	BODY MOUNT	1
48	1AM79000	MOUNT RING	1
49	61912526	F. RING BASE PLATE ASS'Y S.S	2
50	1AFC2800	F. RING BASE PLATE ASS'Y	1
51	61912526	APERTURE INTERLOCK RING RETAINER S.S	1
52	1AM62500	APERTURE INTERLOCK RING RETAINER	1
53	61812226	F. RING BASE PLATE ASS'Y S.S	1

The parts names with * mark are not supplied as a repair parts.

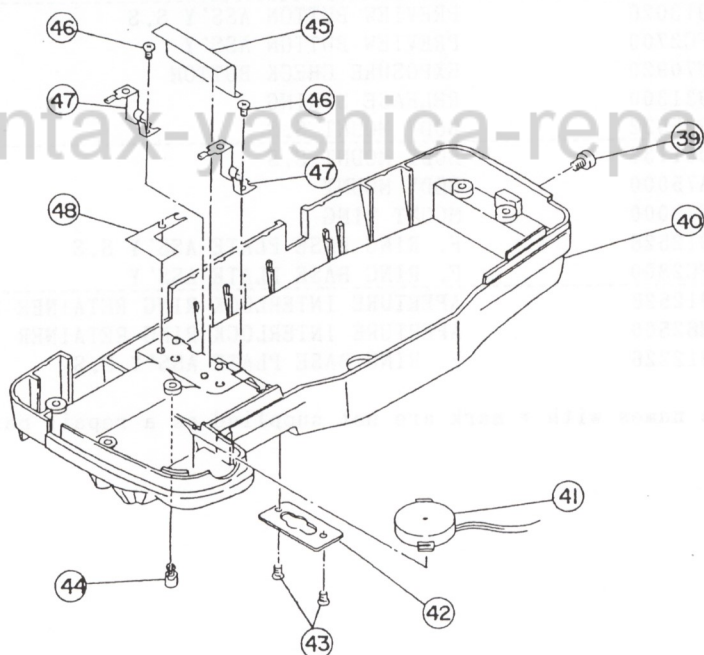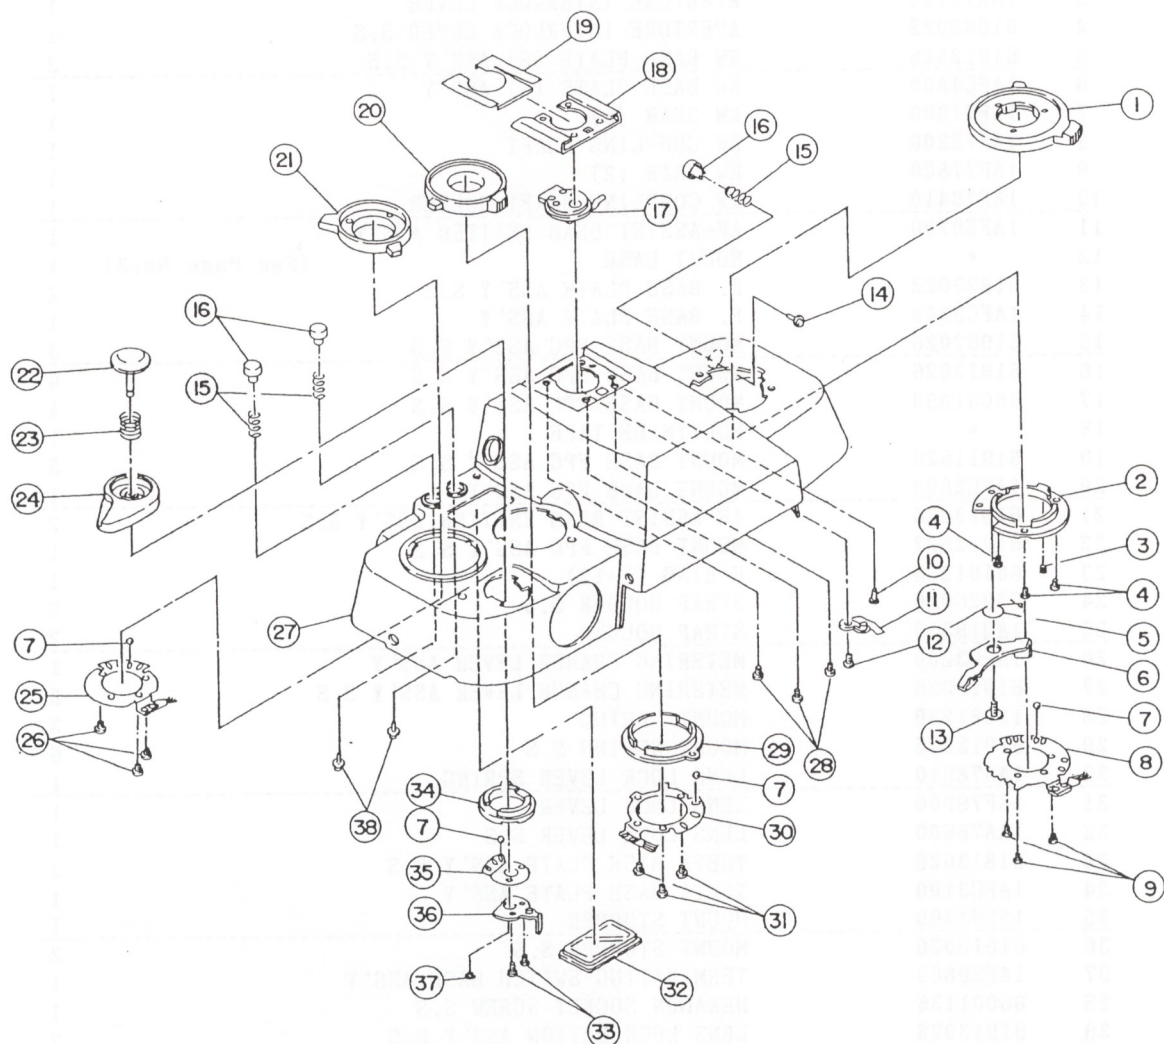


PARTS NO.	DESCRIPTION	QTY
1 1AF20610	MODE LEVER	1
2 1AF20700	MODE LEVER HOLDER	1
3 1AF21000	MODE CLICK SPRING	1
4 61912026	MODE LEVER HOLDER S.S	1
5 1AF24900	MODE LOCK SPRING	1
6 1AF21620	MODE LOCK LEVER	1
7 66701520	STEEL BALL (ϕ 1.5)	4
8 1AFD0600	MODE CLICK ASS'Y	1
9 69103066	MODE CLICK ASS'Y S.S	3
10 1AM22300	SHOE SWITCH PIN	1
11 1AQ27400	SHOE CONTACT PLATE (1) ASS'Y	1
12 61912526	SHOE CONTACT PLATE (1) ASS'Y S.S	1
13 66001004	MODE LOCK LEVER S.S	1
14 1AF26710	M. LOCK BUTTON SHAFT	1
15 1AF26600	U/D BUTTON SPRING	3
16 1AF26500	U/D BUTTON	3
17 1AMB8400	SHOE CONTACT ASS'Y	1
18 1AM20210	ACCESSORY SHOE	1
19 1AM20320	SHOE PLATE SPRING	1
20 1AF23120	ABC LEVER	1
21 1AF24500	F. MODE LEVER	1
22 1AF25800	RELEASE BUTTON	1
23 1AA24400	MAIN SWITCH BUTTON SPRING	1
24 1AF25510	MAIN SWITCH LEVER	1
25 1AFD0400	F. MODE CLICK ASS'Y	1
26 69103066	F. MODE CLICK ASS'Y S.S	3
27 *	TOP COVER (See Page No.1)	1
28 61912022	ACCESSORY SHOE S.S	3
29 1AF23200	ABC LEVER HOLDER	1
30 1AFD0500	ABC CLICK ASS'Y	1
31 69103066	ABC CLICK ASS'Y S.S	3
32 1AF25000	C-LCD WINDOW	1
33 69103066	MAIN SWITCH OPERATION LEVER ASS'Y S.S	2
34 1AF25600	MAIN SWITCH LEVER HOLDER	1
35 1AA24600	MAIN SWITCH CLICK PLATE	1
36 1AFD0300	MAIN SWITCH OPERATION LEVER ASS'Y	1
37 66101225	E RING (E-12)	1
38 1AF26310	U/D BUTTON SHAFT	2
39 1AF27700	BOTTOM COVER GUIDE	1
40 *	CELL CASE (See Page No.2)	1
41 1AF58000	PIEZO-ELECTRIC BUZZER	1
42 1AF27800	BOTTOM COVER LOCK PLATE	1
43 69312566	BOTTOM COVER LOCK PLATE S.S	2
44 1AF28300	BATTERY DETECTION PIN	1
45 1AM28900	BATTERY CHAMBER LIGHT SHIELD TAPE	1
46 69112566	BATTERY CONTACT S.S	2
47 1AF27910	BATTERY CONTACT	2
48 1AF28210	BATTERY DETECTION SWITCH (2)	1

The parts names with * mark are not supplied as a repair parts.

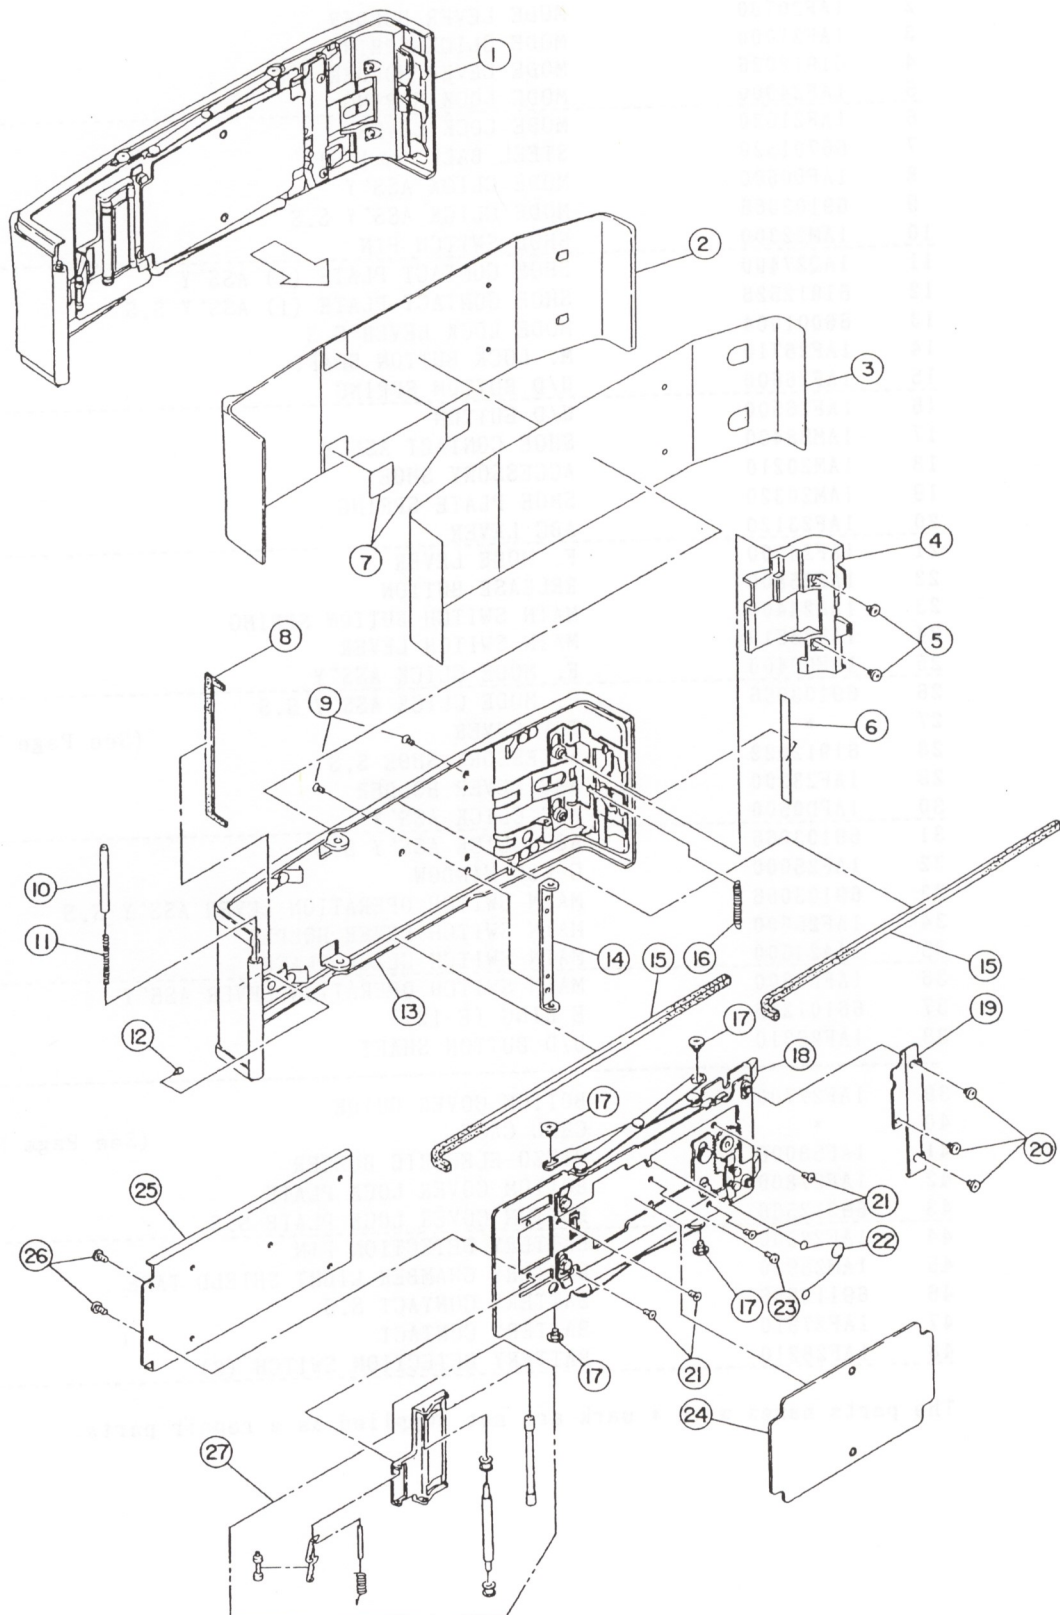

	PARTS NO.	DESCRIPTION	QTY
1	1AFD1000	BACK COVER ASS'Y	1
2	1AF15310	BACK COVER RUBBER	1
3	1AF47100	BACK COVER RUBBER TAPE	1
4	1AF15710	LOCK RELEASE PLATE COVER	1
5	63912526	LOCK RELEASE PLATE COVER S.S	2
6	1AF45200	B. ANTI-REFLECTION SHEET	1
7	1AF15400	BACK COVER RUBBER SUPPORT PLATE	2
8	1AF46900	BACK COVER LIGHT SHIELD MOQUETTE	1
9	69312566	BASE HOLDING PLATE S.S	2
10	13113000	HINGE SHAFT (1)	1
11	17417700	HINGE SHAFT SPRING	1
12	66001166	HINGE SHAFT RELEASE PIN	1
13	*	BACK COVER	1
14	1AF16700	BASE HOLDING PLATE	1
15	1AF47200	BACK COVER MOQUETTE	2
16	1AF16000	LOCK RELEASE PLATE SPRING	1
17	66001189	PRESSURE PLATE BASE ASS'Y S.S	4
18	*	PRESSURE PLATE BASE	1
19	1AF19400	BASE LOCK PLATE COVER	1
20	66001050	BASE LOCK PLATE COVER S.S	3
21	69312566	BASE REINFORCEMENT PLATE S.S	4
22	1AF17800	BASE LOCK PLATE SPRING	1
23	63912526	BASE REINFORCEMENT PLATE S.S	1
24	1AFD1700	PRESSURE PLATE ASS'Y	1
25	1AF47310	BASE REINFORCEMENT PLATE	1
26	69212566	FILM ROLLER BASE ASS'Y S.S	2
27	1AFD1600	FILM ROLLER BASE ASS'Y	1
18~27	1AFD1400	PRESSURE PLATE BASE ASS'Y	1

The parts names with * mark is not supplied as a repair parts.

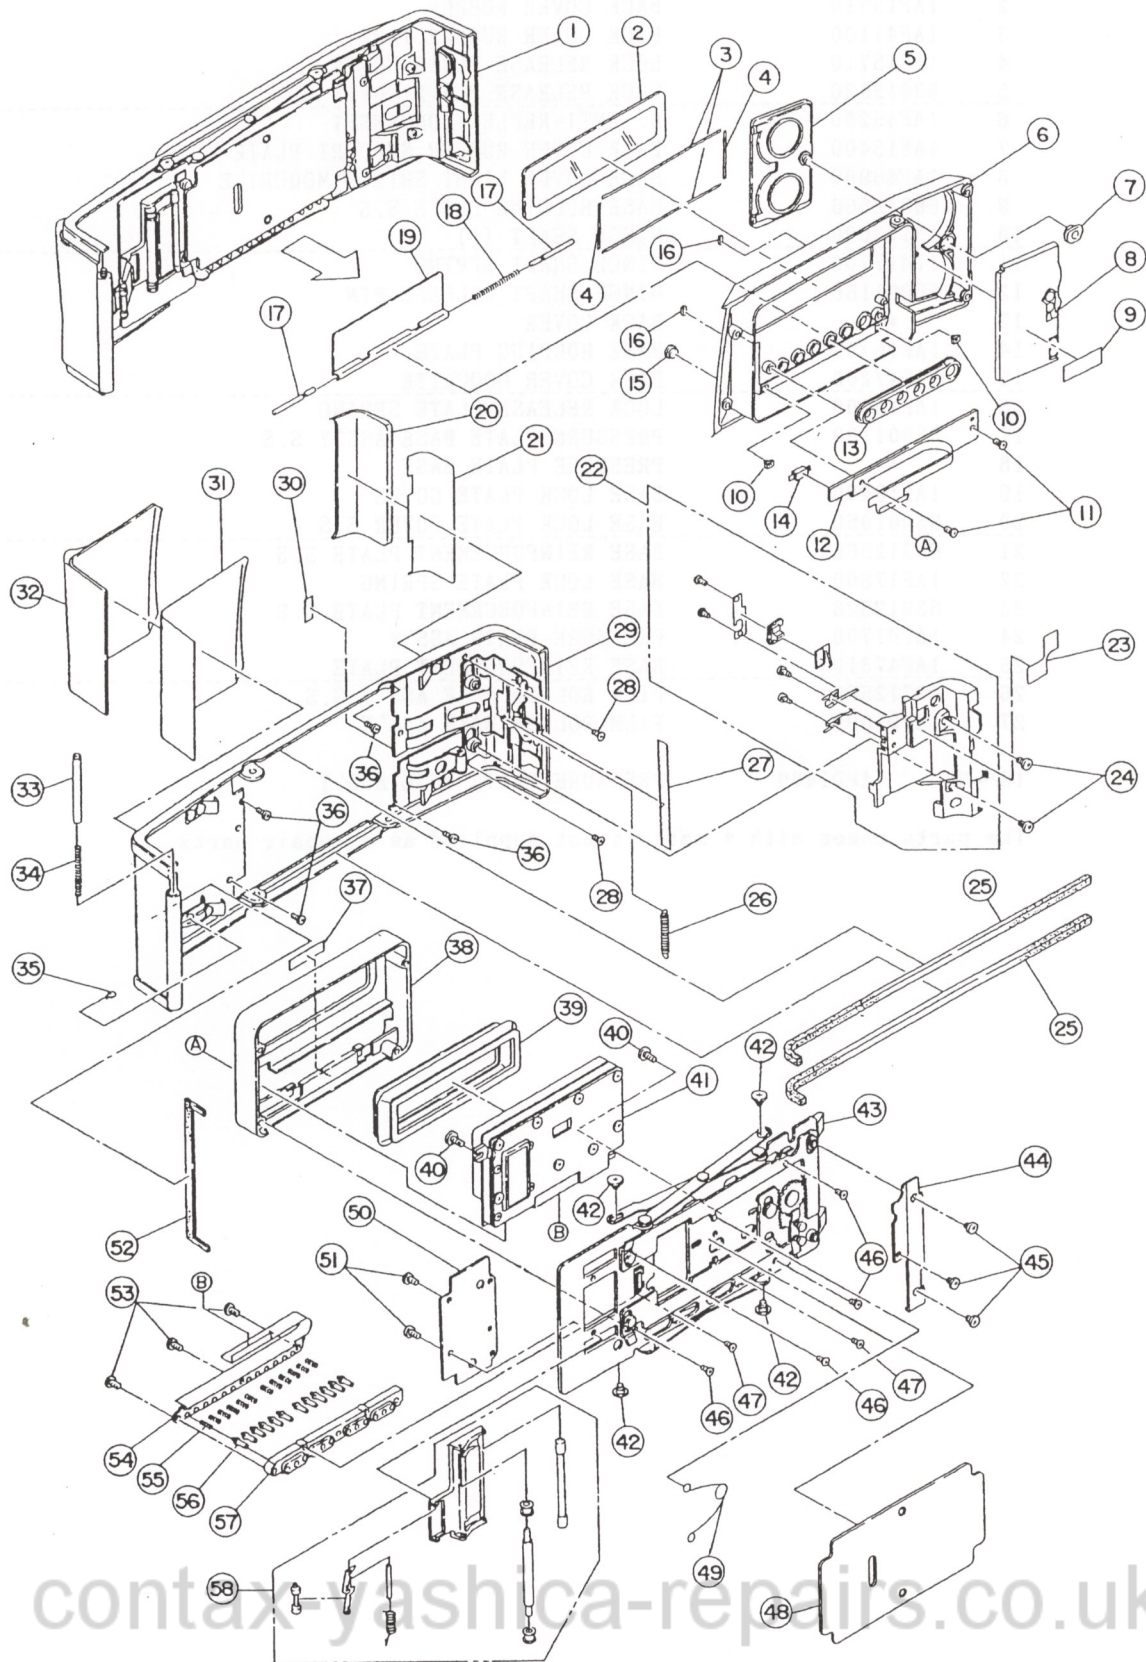

PARTS NO.	DESCRIPTION	QTY
1 *	BACK COVER (D) ASS'Y	1
2 2DA22000	BACK COVER PANEL	1
3 2DA23600	PANEL TAPE (1)	2
4 2DA23700	PANEL TAPE (2)	2
5 2DAB5000	D. BATTERY CAP ASS'Y	1
6 2DA21710	BACK COVERING	1
7 2DA23300	D. BATTERY CAP SCREW SOCKET	1
8 2DAE2000	D. BATTERY CONTACT ASS'Y	1
9 *	DOUBLE-STICK TAPE	1
10 2DA21800	BACK COVER CAP	2
11 69113076	MODE BUTTON FPC S.S	2
12 2DA24100	MODE BUTTON FPC	1
13 2DA22110	MODE BUTTON	1
14 2DA24300	M. INDICATION LED	1
15 2DA22610	M. INDICATION WINDOW	1
16 2DA22500	MODE BUTTON COVER MG	2
17 2DA22300	MODE BUTTON COVER SHAFT	2
18 2DA22400	MODE BUTTON COVER SPRING	1
19 2DA22200	MODE BUTTON COVER	1
20 2DA20310	BACK COVER RUBBER (L)	1
21 2DA23500	BACK COVER RUBBER (L) TAPE	1
22 2DAB1000	LOCK RELEASE PLATE COVER ASS'Y	1
23 2DA21000	M-SW NAME PLATE	1
24 63912526	LOCK RELEASE PLATE COVER ASS'Y S.S	2
25 1AF47200	BACK COVER MOQUETTE	2
26 1AF16000	LOCK RELEASE PLATE SPRING	1
27 1AF45200	B. ANTI-REFLECTION SHEET	1
28 69313066	BACK COVERING S.S	2
29 *	BACK COVER (D)	1
30 *	DOUBLE-STICK TAPE	1
31 2DA23400	BACK COVER RUBBER (R) TAPE	1
32 2DA20200	BACK COVER RUBBER (R)	1
33 13113000	HINGE SHAFT (1)	1
34 17417700	HINGE SHAFT SPRING	1
35 66001166	HINGE SHAFT RELEASE PIN	1
36 69113076	BACK COVERING S.S	4
37 *	DOUBLE-STICK TAPE	1
38 2DA21410	MODULE COVER	1
39 2DA21900	LIGHT SHIELD RUBBER	1
40 66001039	MULTI MODULE UNIT S.S	2
41 2DA24000	MULTI MODULE UNIT	1
42 66001189	PRESSURE PLATE BASE ASS'Y S.S	4
43 *	PRESSURE PLATE BASE	1
44 1AF19400	BASE LOCK PLATE COVER	1
45 66001050	BASE LOCK PLATE COVER S.S	3
46 69313066	MODULE COVER S.S	4
47 69313066	DATE CONTACT HOLDER S.S	2
48 2DAB3000	PRESSURE PLATE (D) ASS'Y	1
49 1AF17800	BASE LOCK PLATE SPRING	1
50 2DA24500	BASE REINFORCEMENT PLATE	1
51 69212566	FILM ROLLER BASE ASS'Y S.S	2
52 1AF46900	BACK COVER LIGHT SHIELD MOQUETTE	1
53 69213576	BODY CONNECT FPC S.S	3
54 2DA24200	BODY CONNECT FPC	1
55 1AH15900	CONTACT SPRING	12
56 2DA21610	BACK COVER CONNECTOR PIN	12
57 2DA21500	DATE CONTACT HOLDER	1
58 1AFD1600	FILM ROLLER BASE ASS'Y	1

37~41, 43~47, 49~51, 53~58,

2DAB2000

PRESSURE PLATE BASE ASS'Y

1

The parts names with * mark are not supplied as a repair parts.